



1. How to replace digit.

Turn OFF and disconnect score-board mains-power

Unscrew the Phillips-screws from one of the sides and remove the metalbar

Slide the acrylic frontplate to the side.

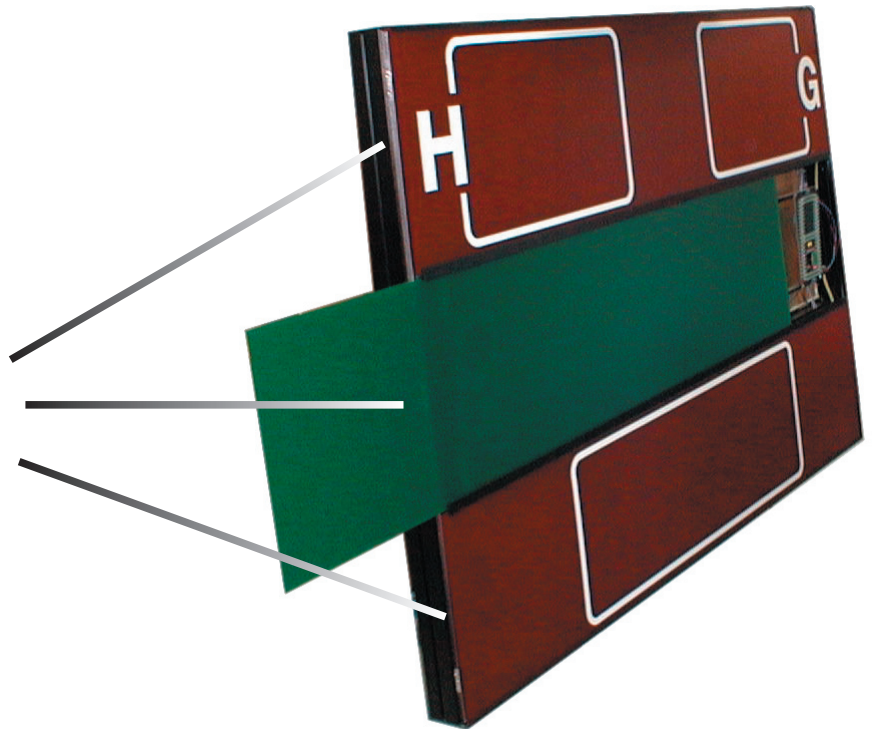


Fig. 1 Sample score-board

Locate the defective display.

Unscrew the 4 retaining screws and unplug cables attached to the digit.

Set the address dipswitch on the new digit as on the defective digit.

Mount the new digit using the 4 screws and plug in cables.

Connect mains power and turn on the power.

Test the score-board.

If no error occurs, mount the fronts again.

Mount the metalbar and fasten it using the Phillips-screws.

Dipswitch for setting
digit-address

