



## 1. How to change the NauController

- 1) Disconnect 230V power cable.
- 2) Loosen the 2 screws.

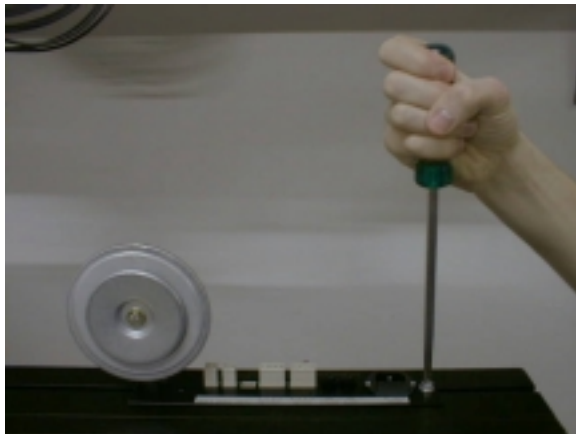

- 3) Pull out the print.

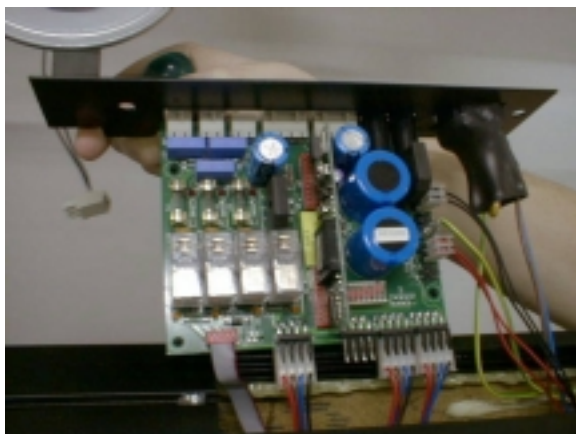

- 3) Carefully change the NauController.



- 4) Before you connect cable between the scoreboard and the console, be sure that there is no short-circuit on the cable between the pins.