


1. NT98 Digit and DD (Display Driver) Troubleshooting.

This Troubleshooting guide is developed, so the customer can troubleshoot, detect and order a new spare part, if a Digit or DD is faulty.

1.1 Dismounting the Acryl Front.

Follow the steps as described below.

1. Dismount the screws in one of the sides of the Scoreboard, and remove the metal bracket.
2. Remove the Acryl covering the faulty digit.

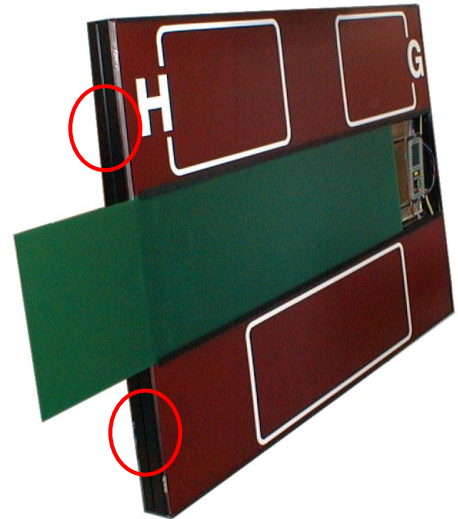

1.2 Troubleshooting.


When the faulty digit is accessible, follow the steps below:

1. Cut the power for the Scoreboard.
2. Switch the DD from the **faulty** digit, with a DD from a **working** Digit.
3. Turn the Power for the Scoreboard On.
4. If the **faulty Digit is functioning**, the **DD is damaged**, and must be replaced.
5. Use these spare numbers, to order new DD's:

Indoor Scoreboards: 92030000.
Outdoor Scoreboards: 92030001.


Faulty

Working

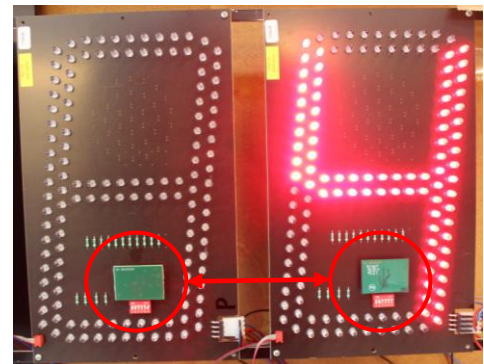

Working

Faulty

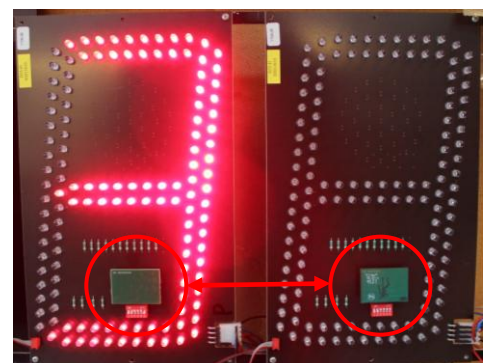

1.3 Troubleshooting extended.

If the Digit is still faulty, follow the steps below.

1. Cut the power for the Scoreboard.
2. Remove the DD, and **clean** the Connector in which the DD is placed.
3. Remove the 4 Pin connector and **clean** the pins.
4. Reconnect the **4 Pin Connector** and the **DD**.
5. Turn the Power for the Scoreboard on.
6. If the error still exists, **the Digit is damaged**, and must be replaced.
7. Contact the Spare Parts dealer to order a new digit. *Be sure to have the Model Type, Serial number and information regarding which Digit is damaged ready when ordering.*
8. Done.

