NG08 and NG12 generation.

NAUTRONIC SCOREBOARD SYSTEM


How to replace text-display.

Version: 2

1. DIP Setting.


Before replacing the damaged Text-display, locate the DIP-Switch on it and write the setting down on the DIP-Setting scheme.

• It is important that the new Text-display has the same DIP-Setting as the one it is replacing.

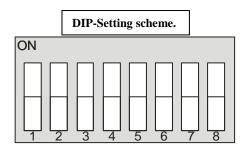

2. How to replace digits.

- 1. Turn off the power for the Scoreboard.
- 2. Dismount the screws in one of the sides of the Scoreboard, and remove the metal bracket.
- 3. Remove the Acryl covering the Text-display that must be replaced.

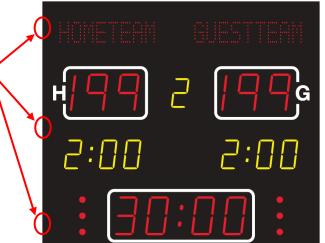

- 4. Unscrew the screws holding the Text-display in place.
- 5. Disconnect the Ribbon Cable mounted on the old-Text-display.
- 6. When removing the old Text-display, disconnect the 4 pin rear connector.
- 7. Before the new Text-display is mounted, make sure the 4 pin rear connecter is properly connected.



- 8. Reconnect the Ribbon Cable.
- 9. Set the DIP-Switch on the new Text-display, according to the DIP-Setting scheme that was filled in the top.
- 10. Turn on the power for the Scoreboard, and check that new Text-display is working.
- 11. Reassemble the Scoreboard.

