


1. How to replace the Horn.

1. Turn off the power for the Scoreboard.
2. Dismount the screws on the right side of the Scoreboard, and remove the metal bracket.
3. Remove the Acryl covering the Horn.
4. Unscrew the bolt holding the Horn in place.

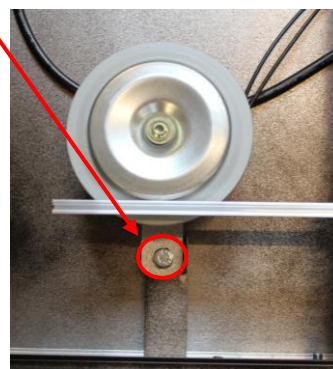

4. Unscrew the bolt holding the Horn in place.



5. Remove the black cable from the old horn mounted on the NGI-85.

6. Mount the new Horn with the washer and bolt.

7. Reconnect the cable from the new Horn on J7.

8. Reassemble the Scoreboard

9. Done.

